


The exploded view diagram illustrates the following components:

- Housing:** The main upper casing.
- Impeller:** The central rotating component.
- Mechanical Seal:** A large circular seal between the housing and impeller.
- O-Rings:** Multiple small circular seals for secondary sealing points.
- Gaskets:** Flat circular spacers or seals.
- Bearings:** Two ball bearings supporting the shaft.
- Shaft:** The central drive shaft.
- Fasteners:** Screws and bolts used for assembly.

PESO	0,140 g.
N° COMPONENTI	26 pezzi

[illegible]

TRD 200 PA
TRD 200 PB
TRS 200 PA
IVECO 4674936
IVECO 4674937

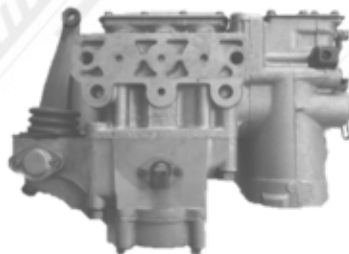

I NOSTRI PRODOTTI NON SONO ORIGINALI MA CON ESSI INTERCAMBIABILI. I RIFERIMENTI ALLE CASE COSTRUTTRICI E AI LORO CODICI SONO PURAMENTE INDICATIVI